

# RICE SERVER (M3)




## (1)setting for back cover

Check the front and back of the cover and attach the rubber seal to the back cover.  
 front(①concave,②thin groove)    back(①convex②thick groove)



Set on the lid with the front side facing.

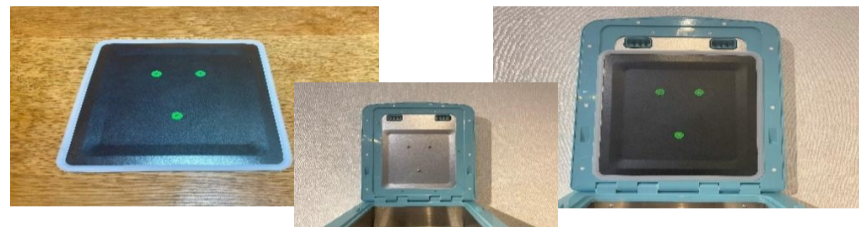

## (2)Setting for roller(under)

Apply oil on the parts③④⑤and attach them.  
 \*If the ④⑤ are backwards,they will not be able to be set correctly.



Attach ⑧ in the order of ④⑤→③



## (3)Setting for roller(over)

Apply oil on the ⑧ and attach to ③  
 Apply oil inside of ⑦ and attach to ③



Apply oil on the parts ⑨⑩ and attach to ③  
 \*If the ⑨⑩ are backwards,they will not be able to be set correctly.



## (4)Setting for mainbody

Set ③ to the mainbody.  
 Apply oil to ⑪ and set it to the mainbody.



Apply oil inside of ⑫ and set it to the mainbody and lock.  
 Set ⑬ to the mainbody.

